

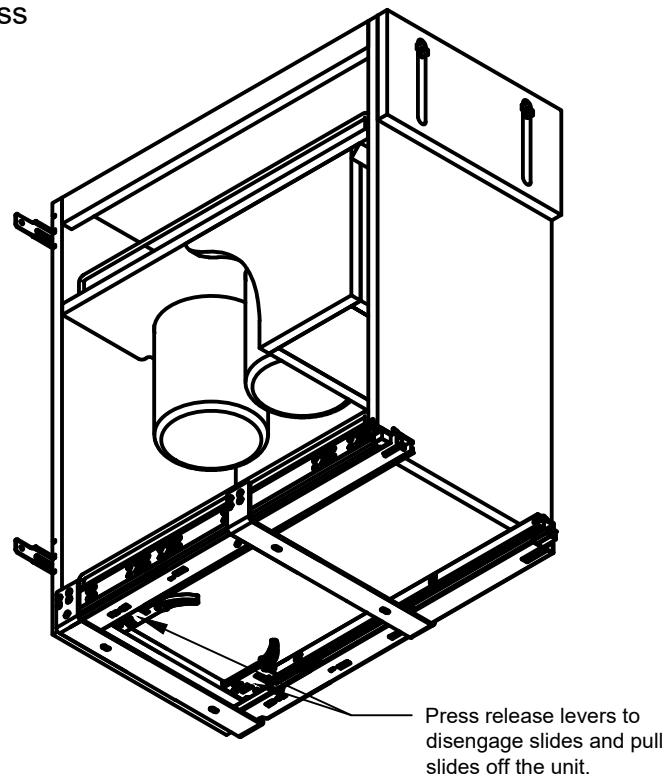


Elemental Wooden Base Organizer


1. Unbox the unit and detach the wooden carcass from the slide carriage.

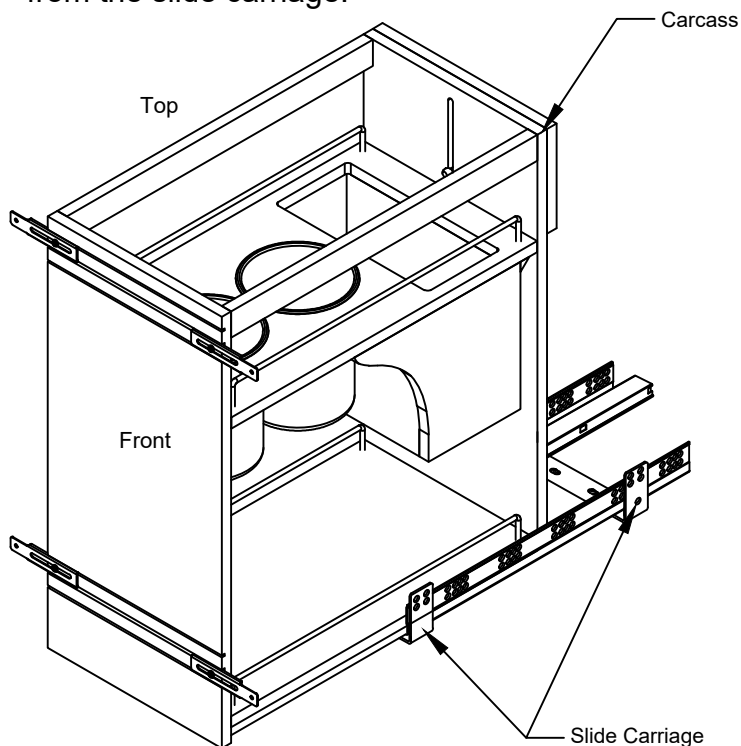

2. Mount slide carriage in cabinet opening using included #8 pan head screws.

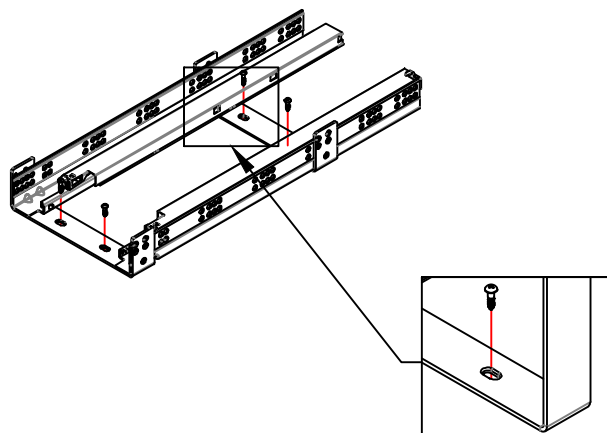

3. Re-install carcass to the slide carriage.

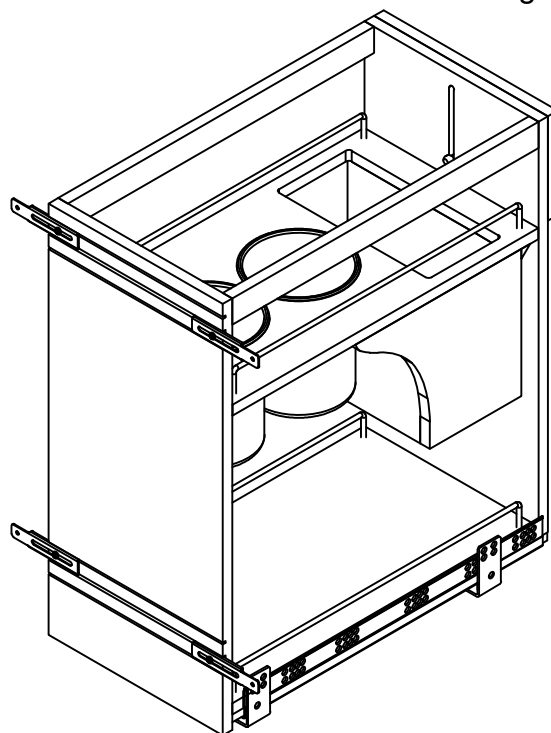

Elemental Wooden Base Organizer

4. Position door brackets in your preferred location and then mount securely to the door using provided #6 screws or other appropriate fasteners. Adjust door using drawer slide release levers (up-down) and bracket slots (left-right).

